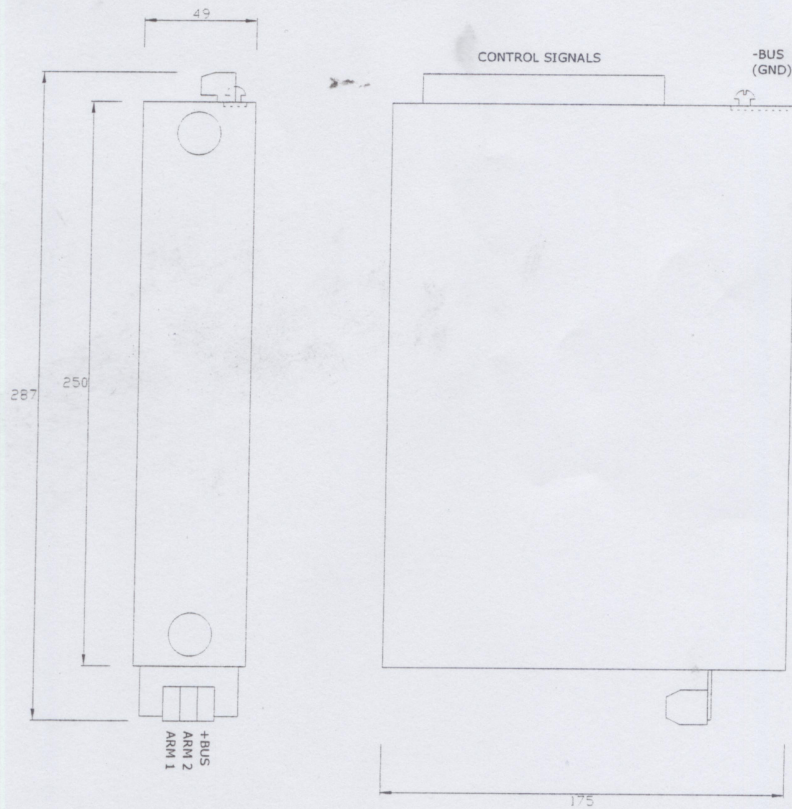


**WARNING**

Dangerous power levels exist in the A241-PA servo controller together with its power supply and all associated equipment. Only qualified personnel should work on this equipment. At all times during the initial set-up, be prepared to remove power if a mechanical or electrical problem occurs.

**2.1 GENERAL**

The A241-PA must be mounted on the backplane / cooling assembly. The power supply is on the left of the assembly and the drives are mounted to the right of the power supply. Before mounting, the base of the drive must be coated with a thin layer of thermal grease to ensure good thermal conduction from the drive to the heat sink.

**2.2 MECHANICAL**

**Figure 1**  
Outline Dimensions